

KASO PK E1-400 Eurosafes

- Burglaryproof fire protection -



- Modern design and wide range of accessories for multiple storage needs
- Burglary protection Grade I according to European Standard EN 1143-1 (ECB-S)
- Fire protection 60 minutes according to NT FIRE 017 - 60 Paper
- Security locking system against burglary, theft and unauthorized access
- Over a century of experience in tested security solutions

KASO PK E1-400 Eurosafes

Tested protection for your documents and valuables

- Economical and modern secure storage solution
- Burglary protection Grade I, European Standard EN 1143-1 (ECB-S)
- Fire protection for 60 minutes for documents, NT FIRE 017 - 60 Paper
- Manufactured in accordance with the ISO 9001:2000 quality management system

Locking and Security


- The locking mechanism consists of sliding locking bolts on three sides and a locking frame structure on the back panel of the door
- The locking system protects the safe against unauthorized access and keeps the door tightly closed in case of fire
- PK E1-400 Eurosafes are supplied with ECB-S certified Mauer keylock as standard. Also available with electronic codelock or mechanical combination lock
- Option for two locks

Design

- The dimensioning of the eurosafe is based on the size of standard A4-files (width 50 - 80 mm)
- Standard colour light grey, RAL 7035

Optional inside fittings:

- Adjustable shelf
- Adjustable shelf with filing rails
- Pull-out filing rails
- Pull-out multipurpose drawer
- Key insert
- Data insert MI-400, NT FIRE 017 - 60 Diskette
- Lockable compartment, 150 mm or 350 mm

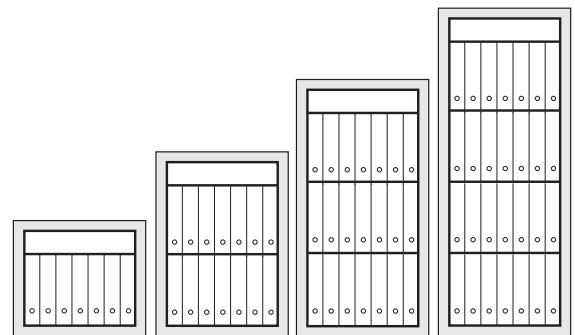

Specifications

	PK E1-410	PK E1-420	PK E1-430	PK E1-440
External				
Height (mm)	680	1030	1380	1730
Width (mm)	670	670	670	670
Depth (mm)	580	580	580	580
Internal				
Height (mm)	490	840	1190	1540
Width (mm)	485	485	485	485
Depth (mm)	360	360	360	360
Volume (l)	87	149	211	273
Weight (kg)	400	540	670	800
A4 file capacity (pcs)	6-9	12-18	18-27	24-36