



KASO PK-400 FIRE SAFES

- fireproof storage for offices -



- Modern design and wide range of models for multiple storage needs
- 120 minutes fire protection according to NT FIRE 017 - 120 Paper
- Burglary protection S1 according to European Standard EN 14450 (ECB-S)
- Security locking system against burglary, theft and unauthorized access
- Over half a century experience in tested fire security products

KASO[®]
SECURITY - 24 HOURS A DAY

KASO PK-400 FIRE SAFES

Tested protection for your documents

- Light in weight and modern fireproof storage solution for offices
- Fire protection for documents according to NT FIRE 017 - 120 Paper (120 minutes fire testing at temperatures over 1045°C)
- Burglary protection class S1 according to European Standard EN 14450 (ECB-S)
- Manufactured in accordance with the ISO 9001:2000 quality management system

Optional inside fittings:


- Adjustable shelves
- Lockable compartments
 - external height 150 mm or 350 mm
- Pull-out multipurpose drawers and filing rails for single door models, PK-410 - PK-440
- Data Media Box MI-400
 - NT FIRE 017 - 90 DISKETTE
 - internal volume 12 litres

Locking and Security

- The locking mechanism consists of sliding locking bolts on three sides and a locking frame structure on the back panel of the door
- The locking system protects the safe against unauthorized access and keeps the door tightly closed in case of fire
- PK-400 fire safes are supplied with ECB-S certified Mauer keylock as standard. Also available with various other electronic code or combination lock models
- S1 burglary certification is only valid for PK-400 fire safes supplied with ECB-S certified security locks
- Option for two locks

Design

- The dimensioning of the safe is based on the size of standard A4-files (width 50 - 80 mm)
- Standard colour light grey, RAL 7035

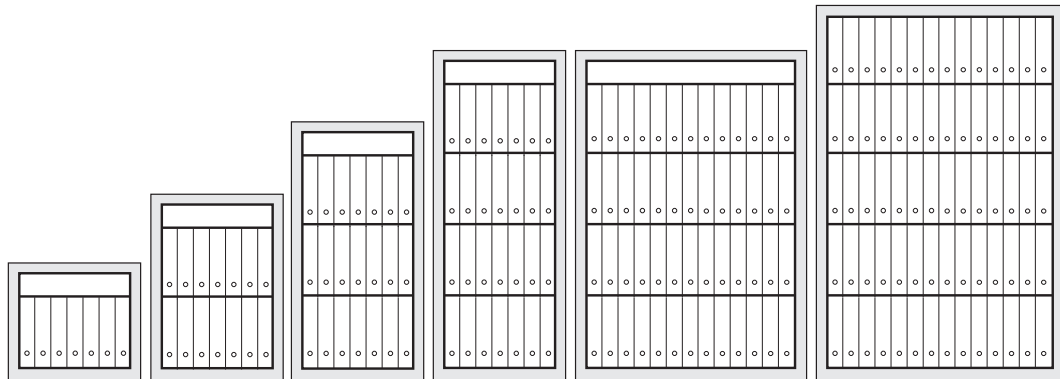

Model	PK-410	PK-420	PK-430	PK-440	PK-480	PK-490
External mm						
height	680	1030	1380	1730	1730	1980
width	670	670	670	670	1160	1220
depth	580	580	580	580	580	580
Internal mm						
height	490	840	1190	1540	1540	1790
width	485	485	485	485	970	1040
depth	360	360	360	360	360	360
Volume l	87	149	211	273	546	679
Weight kg	150	205	260	315	495	565
A4-file capacity (pcs)	6 - 9	12 - 18	18 - 27	24 - 36	48 - 76	65 - 100



Kaso Oy, Lyhtytie 2, P.O. Box 27, 00751 Helsinki, Finland
 Tel. +358 9 346 81, fax +358 9 386 0021
 E-mail: sales@kaso.fi
 www.kaso.fi

