



KASO PTK E-300 series OFFICE SAFES

European tested, light weight and modern safe for every office



- Burglary tested and certified according to Euronorm EN 1143-1 Grade 0 to IV (ECB-S)
- Fire protection for 60 minutes according to NT FIRE 017 – 60 PAPER (Grade 0 to II)
- Wide range of locking options and accessories
- Standard colour light grey, RAL 7035

KASO OFFICE SAFES

New Kaso Office Safes for fire and burglary proof storage of your documents and valuables

Tests

PTK E-300

- BURGLARY tested according to Euronorm EN 1143-1, Class 0 (ECB-S)

PTK E1-300

- BURGLARY tested according to Euronorm EN 1143-1, Class I (ECB-S)

PTK E2-300

- BURGLARY tested according to Euronorm EN 1143-1, Class II (ECB-S)

PTK E3-300

- BURGLARY tested according to Euronorm EN 1143-1, Class III (ECB-S)

PTK E4-300

- BURGLARY tested according to Euronorm EN 1143-1, Class IV (ECB-S)

PTK E-300 / PTK E1-300 / PTK E2-300

- FIRE tested according to the Scandinavian NT FIRE 017 standard, reaching 60 minutes rating for paper - 60 PAPER


- Lockable inner box alternatives: external height 150/350 mm, internal height 120/320 (A4) mm
- Lockable Databox DB 300 (NT FIRE 017/90 DISKETTE), external height 350mm (f.e.g. 50 pcs CD)
- Pull-out keyrack (150 pcs key hooks)
- Pull-out key compartment shelf (28 compartments)
- Pull-out key shelf
- Other RAL colours

Advantages

- Available in six sizes
- Light and slender
- Easily installed - the smallest size can even be placed under the desk
- Sliding bolts on all four sides of the door protect against burglary attack and keep the door tightly closed in case of fire
- Floor anchoring as standard
- Unpickable keylock with two changeable keys as standard (E4 grade with two locks)
- Internal fittings adjustable at 25 mm pitch
- Standard colour RAL 7035

Options

- Combination lock
- Electronic lock
- Two locks
- Adjustable plain shelf
- Pull-out multi-purpose shelf
- Pull-out suspension file frame, size A4
- Pull-out worktop

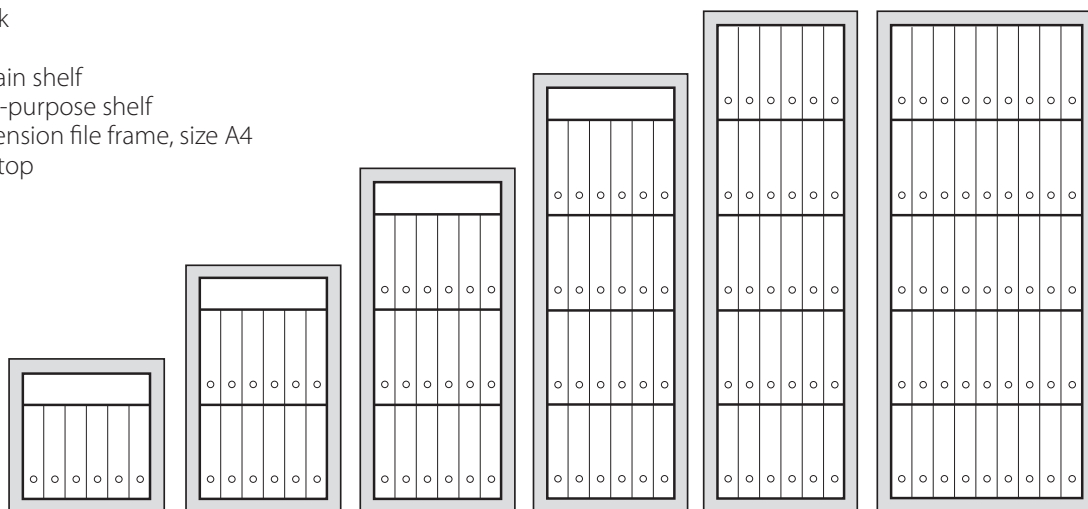

Model	PTK E-310 PTK E1-310 PTK E2-310 PTK E3-310 PTK E4-310	PTK E-320 PTK E1-320 PTK E2-320 PTK E3-320 PTK E4-320	PTK E-330 PTK E1-330 PTK E2-330 PTK E3-330 PTK E4-330	PTK E-340 PTK E1-340 PTK E2-340 PTK E3-340 PTK E4-340	PTK E-350 PTK E1-350 PTK E2-350 PTK E3-350 PTK E4-350	PTK E-370 PTK E1-370 PTK E2-370 PTK E3-370 PTK E4-370
External mm						
Height	612	962	1312	1662	1912	1912
Width	618	618	618	618	618	832
Depth	550	550	550	550	550	692
Internal mm						
Height	493	843	1193	1543	1793	1793
Width	486	486	486	486	486	700
Depth	364	364	364	364	364	506
Volume l	87	149	211	273	317	635
Weight kg						
PTK E - E1/E2	180/220	260/300	340/390	420/470	470/500	650/750
PTK E3/E4	250/280	340/380	430/490	530/610	580/670	850/970



Kaso Oy, Lyhtytie 2, P.O. Box 27, 00751 Helsinki, Finland
Tel. +358 9 346 81, fax +358 9 386 0021
E-mail: sales@kaso.fi
www.kaso.fi

