



russbasset **Gemtrac**

High Density Media Storage

Gemtrac is a high density, quick access storage system that makes efficient use of your floor space. Each Gemtrac consists of two large cabinets with vertical drawers. The drawers are like pull-out-shelving and they are supported overhead by tracks that connect the two cabinets. This patented design provides the highest storage per square foot for most small media applications. Gemtracs ship assembled as two separate cabinets, making installation clean and quick. Gemtracs have no floor tracks and can even be double stacked for maximum cube efficiency.

Features:

Cases

- Enclosed Design - Protects valuable media collections
- Locks - Provides positive security and controlled access
- Occupies only 25 Square Feet (2.4m²)
- Two Case Heights - 81" (2057mm) and 90" (2286mm)
- Heavy Gauge Welded Construction
- Easy Service Access via Removable side panels
- Powder Coat Finish - Durability with no off-gassing
- Leveling Glides - Standard
- Easy Ganging - For multiple unit installations
- Ships Mostly "Set-up" - Ready for track connection and easy to relocate

Drawers & Shelves

- Five Drawer Widths - 5" (127mm), 5½" (140mm), 6" (153mm), 7" (178mm) and 8" (204mm)
- Drawers supported on 8 Ball Bearing Wheels - Smooth and quiet
- Overhead Tracks - Keeps aisles free - No tracks on the floor
- Quick Access to Media - Access thousands of tapes from one position
- Adjustable Shelving in ½" (13mm) increments



The enclosed locking cabinet design provides protection against dust, light and sprinklers, as well as theft. Enclosed storage also provides a neat, organised look to your tape library, none of this is available with open tape racking.



TIAA/CREF, New York



“Gemtrac has saved space and improved productivity in our data centre. Our tape library looks neat and organised and the media is protected from the environment”

Preconfigured 81" Gemtracs*:

Part No.	Media Type	Capacity	Height	Width	Depth	Weight
70-GT81-55R-1329	LTO	3,770	81" / 2057mm	120" / 3048mm	30¼" / 768mm	1,688 lbs / 766 Kgs
70-GT81-55R-1425	DLT	3,500	81" / 2057mm	120" / 3048mm	30¼" / 768mm	1,810 lbs / 821 Kgs
70-GT81-55R-1431	3590 / 9x40 / T10K	4,340	81" / 2057mm	120" / 3048mm	30¼" / 768mm	2,200 lbs / 998 Kgs
70-GT81-7R-13B65	CD	6,760	81" / 2057mm	120" / 3048mm	30¼" / 768mm	1,725 lbs / 783 Kgs
70-GT81-5-9	Small Beta	3,024	81" / 2057mm	120" / 3048mm	30¼" / 768mm	1,616 lbs / 733 Kgs
70-GT81-7-6	Large Beta	1,344	81" / 2057mm	120" / 3048mm	30¼" / 768mm	1,348 lbs / 612 Kgs
70-GT81-5-8	VHS Sleeve	3,072	81" / 2057mm	120" / 3048mm	30¼" / 768mm	1,614 lbs / 732 Kgs
70-GT81-5.5-8	VHS Case	2,320	81" / 2057mm	120" / 3048mm	30¼" / 768mm	1,410 lbs / 640 Kgs

* 81" Tall Gemtrac supplied with Lock. Side and Back Panels not included, and should be ordered separately

russbasset ProMedia Cabinets

Data Media Storage Cabinets

ProMedia Cabinets are the result of years of engineering refinement designed specifically to address the unique needs of storing small media. ProMedia Cabinets are great for smaller media and for mixed collections where you need different size drawers in the same cabinet. All Russ Bassett ProMedia Cabinets are equipped with fully interlocking drawers, allowing only one drawer to be opened at a time, preventing accidental tipping.



Features

Cabinets

- All Cabinets 24" (610mm) Deep - Ergonomic reach
- Three Cabinet Heights - 59" (1499mm), 43" (1092mm) & 27" (686mm)
- Two Cabinet Widths - 30" (762mm) & 48" (1219mm)
- Heavy Gauge Welded Construction
- Powder Coat Finish - Durability with no offgassing
- Leveling Glides
- Turn Key Locks - Easy Security
- Overfile - Additional storage that can be added to 48" wide cabinets

Drawers

- Five Data Drawer Heights - 4" (102mm), 5" (127mm), 6" (153mm), 7" (178mm) and 8" (204mm)
- Two File Drawer Heights - 11" (279mm) & 12" (305mm)
- Mix Drawer Sizes - Accommodates Multi-Media
- Slide-N-Lock Divider - Provides infinite adjustability
- Optional Media Racks - Great for Data Media applications
- Heavy Duty Ball Bearing Slides - Smooth quiet drawer operation
- Drawer Interlocks - Standard for safety


Construction



Heavy duty all-welded box construction to assure years of lasting service. Internal structure consists of an all-welded frame at the front, made of internal structural, vertical and horizontal hat sections. The four top corners are welded closed, ground and sanded to form a smooth, seamless corner. End panels and back panels are formed with offsets to eliminate raw edges where they attach to mating parts.

A recessed drawer-pull is integrated across the full width of the drawer front for convenient access. Precision ball bearing slides are provided to support load and maintain years of smooth operation.

All materials and construction meet the U. S. National Archives specifications.

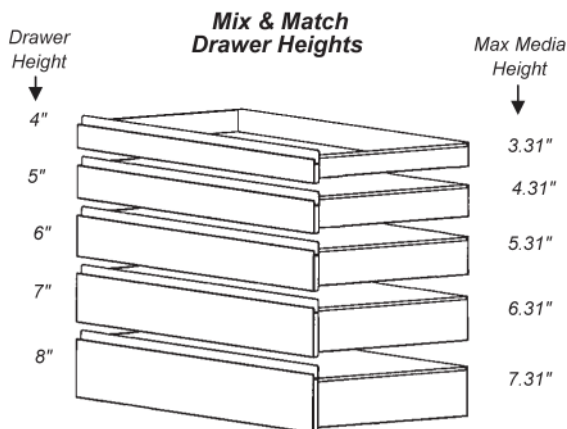

Drawer Height	Suitable Media Type
4"	Mini DV / 4mm / 8mm / Audio Cassette / Small DVC Pro Large DVC-Pro / Small DV-Cam
5"	Large DV-Cam / VHS (Sleeve) / DLT (No Case)
6"	LTO / DLT (With Case) / 3480 / 3590 / 3592 / 9x40 / T10K Small Beta / VHS (Case) / Small D2
7"	CD / DVD (Jewelcase) / DVD (Album) / 5.25 MO (Sleeve)
8"	Large Beta / 3/4 Umatic / D2 Large

Drawer Height	No. of Drawers Per Cabinet		
	Short	Medium	Tall
4"	6	10	14
5"	4	8	11
6"	4	6	9
7"	3	5	8
8"	3	5	7

ProMedia Cabinets are available pre-configured for a specific media type or can be custom configured for mixed media storage. Blanking panels are used to fill any unused internal height.

Overfile Cabinet

The Overfile cabinet connects onto 48" wide cabinets and stores media formats vertically on shelves.

Features

- Consists of seven vertical drawers
- Each drawer has four shelves, which are height adjustable in 1/2" (13mm) increments (without tools or additional hardware) for maximum flexibility
- Overfile cabinets are 36 1/4" (921mm) high, 48" (1219mm) wide & 24" (610mm) deep
- Optional adjustable backstops position all media at the front edge of the shelf for quicker visual & physical access



	A/V Capacity		
	Shelves	No Rack	
	/ Dwr.	/ Dwr.	/ Cab
CD / DVD	4	196	1,372
Small Beta	3	48	336
VHS Case	3	51	357

russebassett TransPac

Steel Transit Cases

Features

- Carries the most popular media formats (3480, 3490, DLT, LTO) securely stored in media packs.
- Single and double pack styles.
- Media is protected against impact with closed cell neoprene rubber. **NO FOAM!**
- Tough, long-lasting textured powder coat finish keeps media safe from off-gassing and is environmentally friendly.
- Store more transfer cases in each case rack because of smaller dimensions.
- Two latches per case, with $\frac{5}{16}$ " (8mm) padlock eye, accommodate controlled dual custody access.



DUAL LATCHES

Provides dual custody option. Keeps both front corners snug and secure.

Compare

Most single pack cases come with only one latch.

STACKABLE

Dimensions and nesting pattern allow single and double width cases to be inter-stacked.

Compare

Most cases do not inter-stack this way.



RADIUS CORNERS

Are more friendly to furniture tops and operators' legs and clothing when being carried.

Compare

Most steel cases have sharp corners that can cause damage.

POWDERCOAT

Durable powdercoat finish. Steel Transfer Case

TAPE ORIENTATION

Tapes are oriented vertically when being carried. The tape is always supported on its hub, as recommended by tape manufacturers.

Compare

Some cases orient tapes in the wrong direction. A drop could cause the tape to shift to the side, causing potential tracking problems.



NO FOAM

Media packs are safe and secure with engineered closed cell neoprene sheets and extrusions, which offers superior absorption of impact. Easy pack removal.

Compare

Over time foam will deteriorate and leave behind a residue that can potentially contaminate tape.

russbassett **Micrographics Cabinets**

Classic Micrographics Cabinets

The Classic collection of media cabinets from Russ Bassett are the original cabinets that set the standard for media storage. The cabinets are quickly recognised by their centre mounted, chrome flush drawer pull. Each cabinet is configured with all the same drawer heights and available in three styles: Vertical, Lateral and the high capacity Extra Deep Lateral. Each of these styles is then available in three heights. The Classic Micrographics Cabinets are available for Microfiche and 16mm / 35mm Roll Film, or a combination of the two.



Features

Cabinets

- Three Depths - Vertical 28⁵/₈" (727mm), Lateral 18¹/₄" (464mm), Extra Deep Lateral 22¹/₂" (572mm)
- Two Cabinet Widths - Vertical 25" (635mm) and Lateral & Extra Deep Lateral 43¹/₈" (1095mm)
- Three Cabinet Heights - Tall 56" (1422mm), Medium 39³/₄" (1010mm) and Short 28⁷/₈" (733mm)
- Heavy Gauge Welded Construction
- Powder Coat Finish - Durability with no offgassing
- Leveling Glides
- Turn Key Locks - Easy Security
- Overfile option for Vertical size cabinet provides additional storage in the same footprint

Drawers

- Flush Chrome Pulls - Classic styling
- Heavy Duty Ball Bearing Slides - Smooth quiet drawer operation
- Drawer Interlocks - Standard for safety

Overfile

- Five vertical drawer Overfile available for Vertical size cabinets.
- 34" (864mm) High
- Provides additional storage capacity (16mm = 780 / 35mm = 480)





EDP Europe Limited

43 Redhills Road - South Woodham Ferrers - Essex CM3 5UL
Tel: +44 (0)1245 322380 Fax: +44 (0)1245 323484
E-mail: sales@edpeurope.com Website: www.edpeurope.com