

TransPac

Steel Transfer Case



We listened to your concerns and developed a durable media transfer case like no other!

- Carries the most popular media formats (3480, 3490, DLT, LTO) securely stored in media packs.
- Single and double pack styles.
- Media is protected against impact with closed cell neoprene rubber. **NO FOAM!**
- Tough, long-lasting textured powder coat finish keeps media safe from off-gassing and is environmentally friendly.
- Store more transfer cases in each case rack because of smaller dimensions.
- Two latches per case, with 5/16" padlock eye, accommodate controlled dual custody access.

 **RussBassett**
CORPORATION
44 Years of Media Storage Solutions

TransPac

Steel Transfer Case

STACKABLE

Dimensions and nesting pattern allow single and double width cases to be inter-stacked.

Compare

Most cases do not inter-stack this way.

DUAL LATCHES

Provides dual custody option. Keeps both front corners snug and secure.

Compare

Most single pack cases come with only one latch.



POWDERCOAT

Durable powdercoat finish.

RADIUS CORNERS

Are more friendly to furniture tops and operators' legs and clothing when being carried.

Compare


Most steel cases have sharp corners that can cause damage.

TAPE ORIENTATION

Tapes are oriented vertically when being carried. The tape is always supported on its hub, as recommended by tape manufacturers.

Compare

Some cases orient tapes in the wrong direction. A drop could cause the tape to shift to the side, causing potential tracking problems.

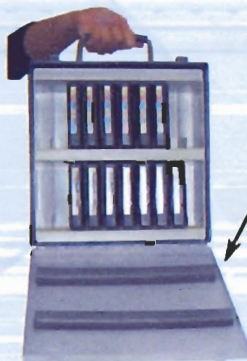

NO FOAM


Media packs are safe and secure with engineered closed cell neoprene sheets and extrusions, which offers superior absorption of impact. Easy pack removal.

Compare

Over time foam will deteriorate and leave behind a residue that can potentially contaminate tape.

FITS STANDARD SHELVES

Less than 6" →

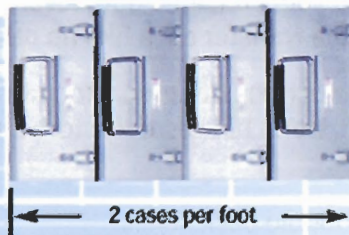

← 2 cases per foot

Compare

Some cases are just over 6". Multiple units may create unusable slot space per beam, and allow for mis-slotting.

SPACE UTILIZATION

Multiple units fit in even width shelves, i.e. - a 5 foot wide shelf will hold ten cases, creating more slots per beam level.

MODEL	DESCRIPTION	OTHER MEDIA	HEIGHT	WIDTH	*DEPTH	WT
TC-1X	Steel Transfer Case single wide, empty		5 7/8	11 3/4	13	7
TC-DLT-16	Steel Transfer Case with one DLT Pack	LTO	5 7/8	11 3/4	13	9
TC-3480-20	Steel Transfer Case with one 3480 Pack	3490/DLT No case	5 7/8	11 3/4	13	9
TC-2X	Steel Transfer Case double wide, empty		5 7/8	23 3/4	13	14
TC-DLT-32	Steel Transfer Case with two DLT Packs	LTO	5 7/8	23 3/4	13	18
TC-3480-40	Steel Transfer Case with two 3480 Packs	3490/DLT No case	5 7/8	23 3/4	13	18

Standard paint finish is TCG Medium Gray.

*Includes handle and latches

RussBassett
CORPORATION

Russ Bassett Corp.
8189 Byron Road
Whittier, CA 90606
800-350-2445
562-698-8972 fax
www.russbassett.com